



AHD VEHICLE CCTV WallCam Quick Setup Guide

Welcome

Thank you for purchasing Videocon Wallcam CCTV camera! This manual is designed to be a reference tool for the installation and operation of your system. Before installation and operation please read the following safeguards and warnings carefully!


Certification & Compliance:

This equipment has been tested and found to comply with FCC, CE, RoHS and ISO standards.

Note: This document contains preliminary information and subject to change without notice.

Warning:-

Do not expose the unit to rain or moisture to prevent fire or shock hazards

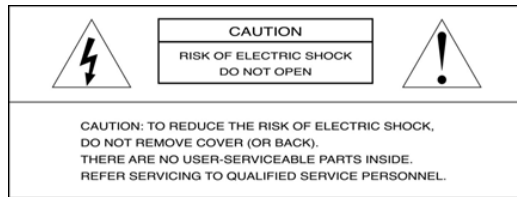

This symbol alerts the user to the presence of non-insulated material dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.



This symbol alerts the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product

1. PACKAGING DETAILS

The content of the package includes:

1. Fully assembled camera – 1N
2. Screw set – 1N
3. Caution sticker – 1N


If any of the part is missing or damaged, please contact the dealer you purchased the WallCam from or call WallCam Customer Service.

2. IMPORTANT SAFETY INSTRUCTIONS

1. Do not operate or store the unit in extremely humid, dusty, hot/cold environment. The recommended temperature is -10° to 50°.
2. Please ensure that the power plug is firmly connected.
3. Please do not open the camera, the product warranty is valid only if the product is not tempered with.
4. Please ensure correct power voltage before using the camera.

3. OVERVIEW OF VEHICLE WALLCAM


3.1 Internal Vehicle WallCam Overview:

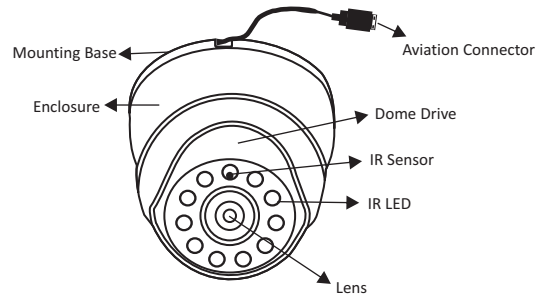

Aviation interface definition

- | | | | |
|---|------|--|---------|
| 1 | +12V | | Video 4 |
| 2 | GND | | Audio 3 |

3.2 External Vehicle WallCam Overview:

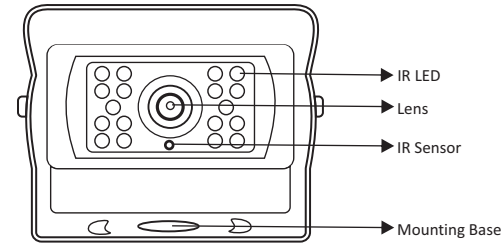

Aviation interface definition

- | | | | |
|---|------|--|---------|
| 1 | +12V | | Video 4 |
| 2 | GND | | |


4. INSTALLATION OF VEHICLE WALLCAM

4.1 Before You Start

- Please make sure that the product in the package is in good condition and all the assembly parts are available.
- Please ensure that all the related equipments are powered-off during the installation.
- Check the above cited product specifications for installation environment.
- Please ensure the mounting surface is strong enough to withstand three times the weight of the camera and the mounting.
- If product doesn't function properly, please contact your dealer or the nearest service center.

4.2 Installation of the Internal Vehicle WallCam


1. Drill the screw holes on the mounting surface according to the template:

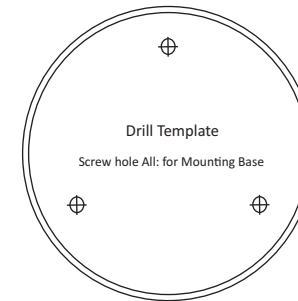

2. Route the cables through cable hole of the mounting base.
3. Fix the mounting base to the mounting surface with the supplied screws.
4. Connect the corresponding power cable and video cable.
5. Fix the camera to the mounting base.
6. Fix the enclosure of the camera.
7. Adjust the camera as per your requirements

4.3 Installation of the External Vehicle WallCam

1. Drill the screw holes on the mounting base according to the below template:

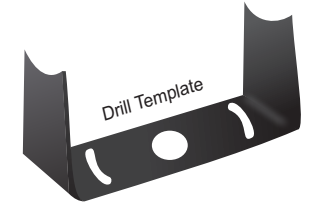

2. Route the corresponding cables.
3. Secure the camera to the surface with the supplied screws.
4. Connect the corresponding power and video cables.
5. Adjust the camera angle.
 - a. Loosen the adjustable screw.
 - b. Adjust the pan/tilt direction.
 - c. Tighten the adjustable nut to complete the installation.

Note:

- For detailed operation introduction, please download manual from our website www.videoconwallcam.com.
- All trademarks and registered trademarks mentioned are the properties of their respective owners.
- Please visit our website or contact your local service engineer for more information.

* All the features and specifications mentioned in this manual may vary from model to model.

Technical Support
we are available when you need us



Customer Care
1800 137 0030